SOP

3<sup>rd</sup> Volume

**Total 5 Pages** 

Model Name: PMP7079D3G\_QUAD

Document No: WLD-PE7.5.1.2-000

**Document Content: Disassemble** 

former outline drawing	
Outline drawing number	
date	
signature	

## SOP

Mode	SMB-D7808	Project	<b>D-01</b> 、Split backcover	Logo figure	Rohs Rohs	vei	rsion: V1.0 working	g		
I		name					hours:	25s	boo	ok 3 page 1
name										

Figure 1

#### Work steps and contain

- 1. In Figure 1 of the corners of the machine near the headset, use a disassemble card inserted a gap which between the front and rear covers.
- $2 \times 10^{-2}$  Figure 2, use disassemble card insert the gap which between the front and rear covers along the sides of the machine, take apart the front and rear shells.

#### Notice item/reference documents

- 1. Items should take place gently, job protection process should pay attention to the appearance of the table to be flat with a soft and clean bedding items.
- 2. According to the WLD ED7.5.1-26 "electrostatic protection management regulations" requirement, to do a good job of anti-static.
- 3. Ion fan should be effectively aligned with the direction of the LCD screen, the separation distance is less than 20cm.
- 4、 If there are three or more similar adverse , should immediately report to group leader.

### <u>reference</u>

prepared by

卢美冰

Figure 2: Disassemble card inserted a gap which between the front and rear covers (from the side which near earphone to start pluging)

audit

approve





Machine corners which near the headphone socket insert cardboard

material code	name/type/model	quantity	
			tool

		1			
	Esd bracelet/gloves	1MΩ with rope	File No	WLD-PE7.5.1.2-000	former outline drawing
I	Ion fan		Change		outline
			change the		date
			Signature/		signature

# SOP

Model	SMB-D7808 Proje	<b>D-02</b> 、 Cable plug open	Logo figure	version: V1.0	working	ho	ok 3 page 2
name	name	e			hours: 25s		o o page 2

#### Work steps and contain

 $1_{\times}$  Figure 1-3 by the order, followed by removing the cable, and disconnect the LCD screen assembly .

#### Notice item/reference documents

- 1. Items should take place gently, job protection process should pay attention to the appearance of the table to be flat with a soft and clean bedding items.
- 2. According to the WLD ED7.5.1-26 "electrostatic protection management regulations" requirement, to do a good job of anti-static.
- 3、 If there are three or more similar adverse , should immediately report to group leader.


#### name/type/model material code quantity former Esd bra D-PE7.5.1.2-000 outline drawing Change outline Ion fan tool number drawing change the date Signature/ signature

### <u>reference</u>

prepared by

audit

approve

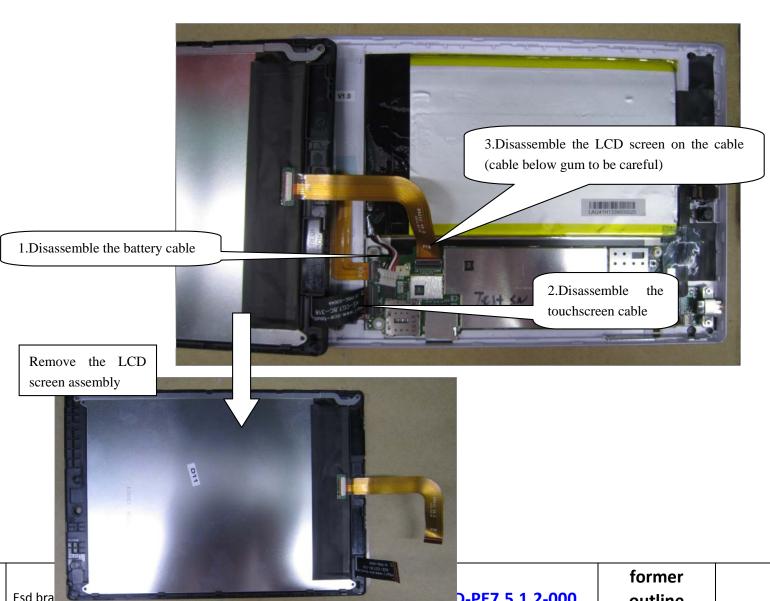

# SOP

301							
Disassemble all the connecting line	Logo figure	A A	version:	V2.1	working	hours	ook
					25c		

1. Disconnect

the port board

**Date** 

cable

prepared by

reference

audit

2.Disconnect the antenna

3.Disconnect

the antenna

approve

7.Disconnect

6.Disconnect

light-sensitive

plate cable

cable

-	_							
	name		name				25s	book 3 page 3
	Model	SMB-D7808	Project	<b>D-03</b> Disassemble all the connecting line	Logo figure	A CONTROL OF THE CONT	version: V2.1 working hours:	book 3 page 3

### Work steps and contain

1. Figure, remove 1-7 respectively connecting line, and open the motor.

#### Notice item/reference documents

- 1. Items should take place gently, job protection process should pay attention to the appearance of the table to be flat with a soft and clean bedding items.
- 2. According to the WLD ED7.5.1-26 "electrostatic protection management regulations" requirement, to do a good job of anti-static.
- 3、 If there are three or more similar adverse , should immediately report to group leader.

#### name/type/model material code quantity 8. Opent the motor 4.Disconnect the key 5.Disconnect board cable former headphones board $1M\Omega$ with rope WLD-PE7.5.1.2-000 Esd bracelet/gloves File No outline cable drawing Change outline number drawing tool change date the label Signature/ signature

# SOP

Demolition headphones board

D-04、

Logo	
figure	RoHS

version: V2.1

<u>reference</u>

prepared by

working hours:

approve

25s

audit

book 3 page 4

### Work steps and contain

**SMB-D7808** 

Model

name

 $1_{\gamma}$  Shown with an electric screwdriver to remove the screws at the A, B, remove the ironware, and then remove the headphones.


Project

name

#### Notice item/reference documents

- 1. Items should take place gently, job protection process should pay attention to the appearance of the table to be flat with a soft and clean bedding items.
- 2. According to the WLD ED7.5.1-26 "electrostatic protection management regulations" requirement, to do a good job of anti-static.
- 3、 If there are three or more similar adverse , should immediately report to group leader.

Remove the ironware pressure plate before you remove the headset board

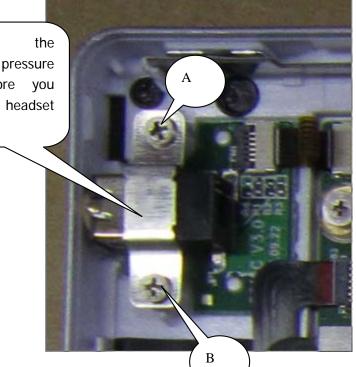



material code	name/type/model	quantity							
				Esd bracelet/gloves	1ΜΩ	with	No WLD-PE7.5.1.2-000	former	
				Esu bracelet/gloves	rope	File	WLD-PE7.5.1.2-000	outline drawing	
			tools	electric hair drier		Char	ge	outline	
			toois			num	oer	drawing	
						chan	=	date	
						Signa	ure	signature	

# SOP

	vers	sion:	V1.0	worki	ng hours:	book 3 p	age 5	

audit

approve


Model	SMB-D7808	Project	<b>D-05</b> Demolition Motherboard	Logo figure	I ROHS	version: V1.0	working hours:	book 3 page 5
name		name					15s	book 3 page 3

### Work steps and contain

1. As shown in figure, using electric screwdriver remove the A - D screw, can remove motherboard.

#### Notice item/reference documents

- 1. Items should take place gently, job protection process should pay attention to the appearance of the table to be flat with a soft and clean bedding items.
- 2. According to the WLD ED7.5.1-26 "electrostatic protection management regulations" requirement, to do a good job of anti-static.
- 3. If there are three or more similar adverse, should immediately report to group leader.

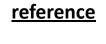

prepared by



material code	name/type/model	quantity								
				Esd bracelet/gloves	1ΜΩ	with	File No	WLD-PE7.5.1.2-000	former outline	
			tool	200 000000, 800 000	rope				drawing	
							Change		outline	
							number		drawing	
							change the		date	
							label			
							Signature/D		signature	
							ate			